


Guide to removing a Push Button Waste Click-Clack for cleaning

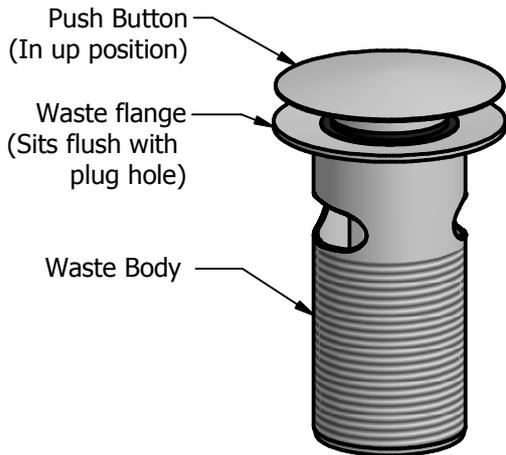


Step 1

– This instruction details the method of removing a Push Button Waste Click-Clack while in position in the bath/sink.

In order to remove the Click-Clack, the Push Button needs to be in the up position as in the diagram on the left. If foreign matter is preventing the push button from clicking up you may need to pry the button up using an appropriate tool.

Note: If you need to pry the button up, please take care not to damage the sanitary ware.

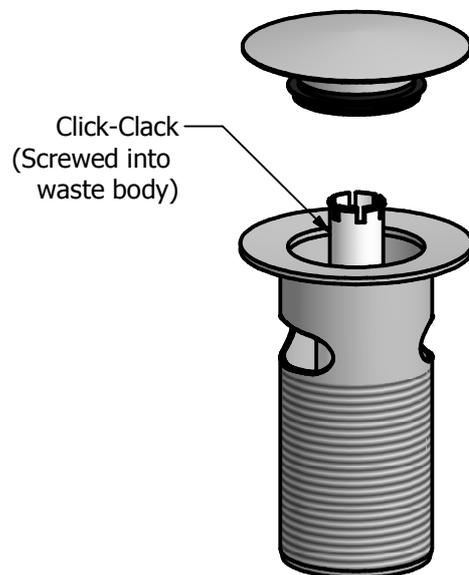


Step 2

– Now that the Push Button is in the up position, it can be removed.

To remove the Push Button please take a firm grip of the button and pull vertically. The push Button should pop off as shown in the diagram on the left.

If the button will not pop off easily please use an appropriate tool to lever the button off.

Note: Please be careful not to damage the sanitary ware if you lever the button off.

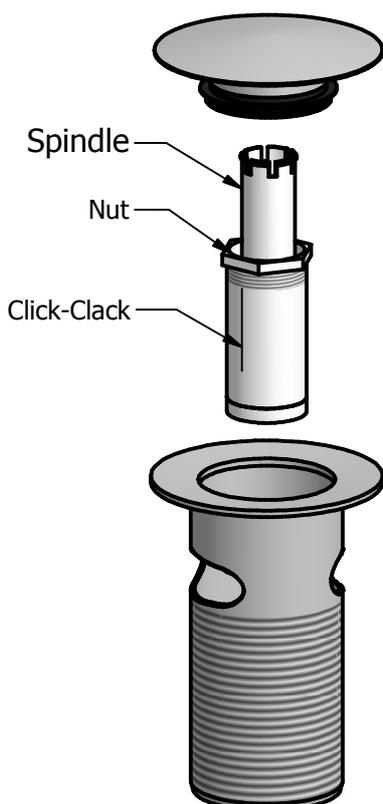

Step 3

– The Push Button has now been removed and the Click-Clack can now be unscrewed.

To do this please use a gripping tool such as a long nose pliers. A deep socket can also be used. If you are using a gripping tool try and position the tool on the nut and rotate anti-clockwise. If you can not grip the nut, use the tool to grip the spindle and rotate anti-clockwise.

Note: If you are gripping the spindle with the tool please be careful not to overly aggressive.

If you are using the deep socket please place it over the nut and rotate anti-clockwise.

Rotate the Click-Clack until it screws free. The click clack can then be cleaned using soapy water to remove any foreign matter. It is a good idea to clean the plug hole Waste Body while the Click-Clack is removed.