




BATHROOM FURNITURE CARE AND MAINTENANCE INSTRUCTIONS

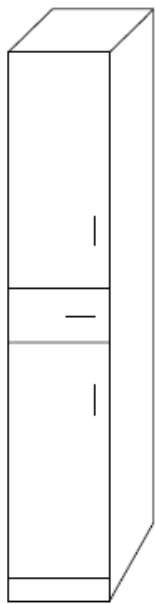


TALL BOY

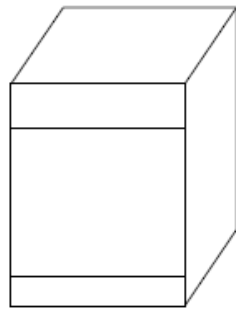

WC UNIT

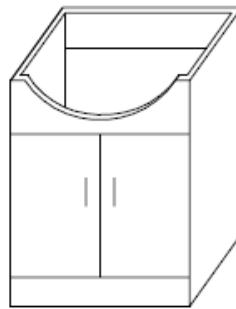

BASIN UNIT

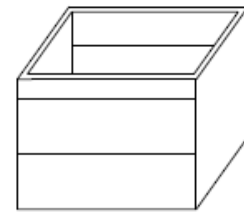


WALL HUNG BASIN
UNIT

- Floor mounted units must be retained back to the wall using screws and brackets (not supplied)
- Wall mounted units must be secured to the wall using "L" brackets (not supplied) and screwed back to the wall through the batten at the back of the unit
- Basin units should be secured as above and also secured using Fischer Fixings through the fixing points under the basin (on no account should the units support the basins alone).
- The hinge on the laundry basket can be adjusted by tightening and slackening the screw on the side of the sliding bar
- Where fixing to stud or panelled walls, appropriate frame work should be installed to support the basins and units.
- Where units or worktops have to be cut out for services cut edges MUST be sealed against water ingress.
- Surfaces should only be cleaned using a soft damp cloth only (do not use detergents or abrasive cleaning products).

BATHROOM FURNITURE CARE AND MAINTENANCE INSTRUCTIONS

MIRRORS

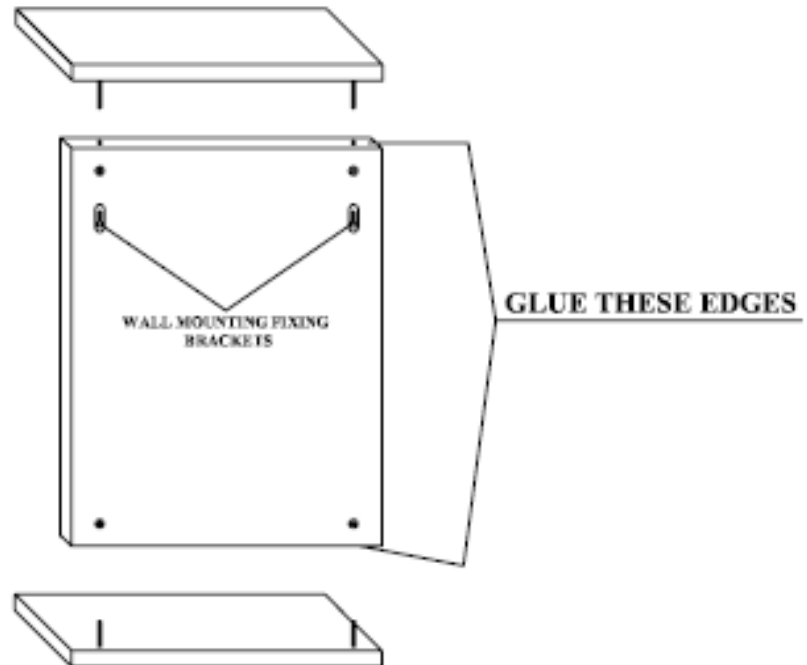

- Mirrors that need assembly of the top light and bottom shelf should be glued on the edges and tightened in place by the cam and dowels (care should be taken not to get the adhesive on the decorative surfaces).
- Position the mirror on the wall and mark position of the fixing points, drill and plug for a No 10 pan head screw and hang the mirror on the key hole slots in the brackets. The mirror can be secured further by using double sided tape on the back bottom edge.